

# Produktinformation



Forschungsprodukte & Biochemikalien



Zellkultur & Verbrauchsmaterial



Diagnostik & molekulare Diagnostik



Laborgeräte & Service

Weitere Information auf den folgenden Seiten! See the following pages for more information!



# Lieferung & Zahlungsart

siehe unsere Liefer- und Versandbedingungen

# Zuschläge

- Mindermengenzuschlag
- Trockeneiszuschlag
- Gefahrgutzuschlag
- Expressversand

# SZABO-SCANDIC HandelsgmbH

Quellenstraße 110, A-1100 Wien

T. +43(0)1 489 3961-0

F. +43(0)1 489 3961-7

mail@szabo-scandic.com

www.szabo-scandic.com

linkedin.com/company/szaboscandic in







# Instruction Manual for StemFit with iMatrix-511\* Maintenance and expansion of human ES/iPS cells with StemFit medium and iMatrix-511

\*This manual is optimized for iMatrix-511. Please see other instruction manuals for other extracellular matrices.

# 1. Materials Required

StemFit medium (e.g. Basic03, Basic04 Complete Type)

0.5x TrypLE™ select CTS\*

iMatrix-511

Human bFGF (Not required for Basic04 Complete Type)

10 mM Y-27632

PBS (-)

## \* Preparation of 0.5x TrypLE™ select (10 mL)

- 1) Add 5 mL of TrypLE™ select CTS (ThermoFisher, A12859-01) into 50-mL tube.
- 2) Add 5mL of PBS(-).
- 3) Add 5  $\mu$ L of 0.5 M EDTA pH8.0 solution (ThermoFisher, 15575-038).
- 4) Mix thoroughly. Store at R.T.

# 2. Media Preparation

StemFit medium is provided frozen. StemFit medium should be stored at below -20°C until use. Use sterile techniques to prepare StemFit medium.

1) Thaw frozen StemFit medium with occasional mixing at room temperature (15-25°C) or in a refrigerator (2-8°C). Avoid prolonged exposure to light.

Note: Do not thaw at 37°C, as it accelerates the degradation of the medium ingredients.

2) Aseptically mix medium components by adding the full volume of "Liquid B" to "Liquid A". Mix thoroughly.

Note: Basic04 Complete Type does not require this step.

3) Add bFGF at a concentration of 80 ng/mL. Mix thoroughly.

Note: Do not warm bFGF solution.

Note: It is recommended to adjust the concentration of bFGF accordingly to suit your cell line.

Note: Basic04 Complete Type does not require this step since it contains bFGF.

- 4) Optionally, the medium can be stored as aliquots at -20°C until the expiration date. Do not re-freeze thawed aliquots. Before use, thaw an aliquot in the refrigerator (2-8°C) overnight.
- Store the thawed medium in the refrigerator.

Note: Thawed StemFit medium may be stored at 2-8°C for up to two weeks.

Note: It is recommended to store the medium in the dark.

Before use, warm aliquots to room temperature and use immediately.

Note: Do not warm the thawed medium to 37°C.


# 3. Passage Protocol (6-well plate)

# **Culture plate coating:**

- Add 9.6  $\mu$ L (4.8  $\mu$ g) of iMatrix-511 to 1.5 mL of PBS in a new polypropylene tube. 1)
- Add 1.5 mL of coating solution prepared in step 1) into a well of the 6-well plate. (coating: 0.5 µg/cm²). 2)
- Incubate at 37°C for 1 hour or overnight at 4°C. 3)


#### **Passage**

- 1) Prepare "passage medium", StemFit medium containing 10  $\mu$ M of the ROCK inhibitor Y-27632. For example, add 4  $\mu$ L of 10 mM Y-27632 to 4 mL of StemFit medium.
- Take out the culture plate from the incubator and observe the cells under a microscope. Observe cell density, colony size, and cell morphology to confirm that the cells are suitable for passage.

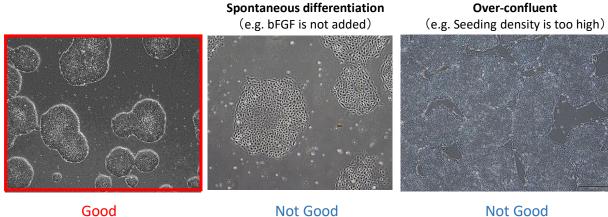

- Remove the medium and wash cells with 1 mL of PBS.
- Add 300 µL of 0.5x TrypLE Select. 4)
- Incubate at 37°C for 10 minutes.

Note: Incubation time may vary depending on the matrix or cell types, limiting the upper limit to 20 minutes. Note: Check the cell morphology in the entire field of wells with a microscope at the beginning, in the middle, and at the end of dissociation step.

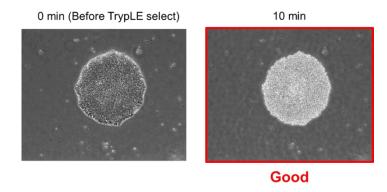

- 6) Remove TrypLE Select and wash gently with 1 mL of PBS.
- Add 1 mL of passage medium prepared in step 1).
- Detach cells immediately by gentle pipetting up and down approximately 10 times. 8) Note: Pipette gently to avoid foaming.

Note: If cells are not detached from the plate, cell scraper can be used for detachment.

- 9) Transfer cells into a new polypropylene tube.
- 10) Take a portion of the cell suspension for counting. Determine the cell concentration.
- 11) Remove coating solution from a well of prepared iMatrix-511-coated plate.
- 12) Add 1.5 mL of passage medium prepared in step 1) to the well immediately.
  - Note: Solutions should be replaced quickly, not to allow the coated wells to dry out.
- 13) Seed 10,000-20,000 cells to a well of 6-well plate. 20,000 cells are recommended at first.

Note: Before Seeding, mix cell suspension by gently pipetting up and down.

Note: Seeding cell number should be optimized for each cell line.

14) Immediately, shake the plate to distribute cells.

Note: To avoid uneven distribution on the bottom, plate shaking should be performed immediately after seeding.

- 15) Incubate cells at 37°C, 5% CO<sub>2</sub> for more than 24 hours.
- 16) Exchange medium the next day. Remove the passage medium and gently add 1.5 mL of StemFit medium without Y-27632.

Note: Passage medium should be replaced after more than 24 hours.

17) Passage the cells every 7 days.

Note: You can culture hPSCs without weekend medium changing. See the following passage schedule examples.

Note: If the color of the medium becomes orange or yellow, it should be changed every day.

Note: Do not allow cells to become confluent.

#### Option: Uncoat Passage Protocol (6-well plate without coating; skip culture plate coating step)

1) Prepare "passage medium", StemFit medium containing 10 µM of the ROCK inhibitor Y-27632.

For example, add 4  $\mu$ L of 10 mM Y-27632 to 4 mL of StemFit medium.

- 2) Take out the culture plate from the incubator and observe the cells under a microscope. Observe cell density, colony size, and cell morphology to confirm that the cells are suitable for passage.
- 3) Remove the medium and wash cells with 1 mL of PBS.
- 4) Add 300 μL of 0.5x TrypLE Select.
- Incubate at 37°C for 10 minutes.

Note: Incubation time may vary depending on the matrix or cell types, limiting the upper limit to 20 minutes.

Note: Check the cell morphology in the entire field of wells with a microscope at the beginning, in the middle, and at the end of dissociation step.

- 6) Remove TrypLE Select and wash gently with 1 mL of PBS.
- 7) Add 1 mL of passage medium prepared in step 1). Blow out medium directly onto the colonies to detach cells.
- 8) Detach cells by gentle pipetting up and down approximately 10 times.

Note: Pipette gently to avoid foaming.

Note: If cells are not detached from the plate, cell scraper can be used for detachment.

- 9) Transfer cells into a new polypropylene tube.
- 10) Take a portion of the cell suspension for counting. Determine the cell concentration.
- 11) Add 5 µL of iMatrix-511 into 1.5 mL of passage medium prepared in step 1) in a new polypropylene tube.
- 12) Add 10,000-20,000 cells into the tube prepared in step 11).
- 13) Add cell suspension prepared in step 12) to a well. (Final concentrations:  $0.25 \mu g/cm^2$  iMatrix-511, 10,000-20,000 cells/well,  $1.5 \mu g/cm^2$  iMatrix-511, 10,000-20,000

- 14) Incubate cells at 37°C, 5% CO<sub>2</sub> for more than 24 hours.
- 15) Exchange medium the next day. Remove the passage medium and gently add 1.5 mL of StemFit medium without Y-27632.

Note: Passage medium should be replaced after more than 24 hours.


16) Passage the cells every 7 days.

Note: You can culture hPSCs without weekend medium changing. See the following passage schedule examples.

Note: If the color of the medium becomes orange or yellow, it should be changed every day.

Note: Do not allow cells to become confluent.

## StemFit Passage Schedule Examples (Weekend-free feeding)

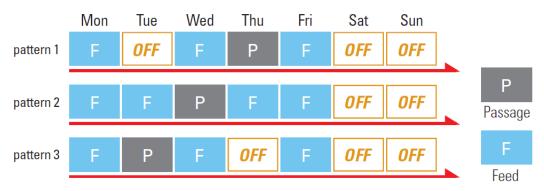


#### Reccomended volume of culture medium

	6-well	12-well	24-well	96-well
Approximate area (cm²)	9.6	4.0	2.0	0.33
Volume of medium (mL)	1.5	1	0.5	0.1
Volume of iMatrix-511 (μL)	5	2	1	0.33

# 4. Transfer from other culture systems

- To transfer cells from other culture systems to the StemFit system, it is recommended to passage with the original culture system, then to switch the culture medium to StemFit supplemented with bFGF 2-3 days prior to the next passage.
- Seeding the cells at a higher density (>1.0 x 10<sup>5</sup> cells per well (6-well plate)) may be helpful for the first few passages.

Transition Schedule Example

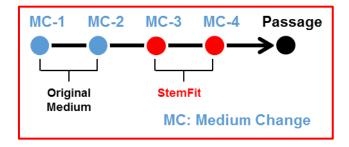

# 5. FAQs & Troubleshooting

#### 1) What are the benefits of single cell culture? / Why is single cell culture recommended?

- ➤ High fold expansion rate (~100× expansion / weekly passage).
- > Reproducible and manageable culture by controlling the numbers of seeded cells.
- Cost-effective culture with lower medium volume and less frequent medium changes.
- Produce an iPSC colony derived from single cells (essential for genome editing).

#### 2) Can I use StemFit for clump culture?

Yes, but it is recommended to make a small clump and seeding at a low cell density.

#### 3) Which bFGF can be used ?

Any commercially available bFGF have been confirmed to work. Ajinomoto provides high quality, animalorigin free bFGF (Item code: SP-FGF2-G-001MG).

#### 4) Cells do not grow well.

- Adjust the bFGF concentration (e.g. 40 80 ng/mL) according to your cell line.
- Try a higher seeding density (e.g. > 1.0 x 10<sup>5</sup> cells per a well of 6-well plate).
- Distribute the cells evenly upon passage.
- Culture in Y-27632-containing medium for more than 24 hours after passaging.
- Make sure that the medium was thawed within 2 weeks and has not been heated to 37°C.
- > Detached cells with low viability may not grow well.
- Uncoated method cannot be applied high density-seeding. (Cells poorly attach to the wells).

#### 5) Cells do not attach to the wells.

- Precisely count cell number in the cell suspension, calculate volume to seed.
- Cryopreserved cells cannot be seeded by the uncoated method since they are usually seeded in high density.

#### 6. Contact information

Manufacturer: AJINOMOTO CO., INC.

Suppliers (Global Source): AMSBIO / AMS Biotechnology (Europe) Ltd

Email: info@amsbio.com

AMSBIO | www.amsbio.com | info@amsbio.com

AMSBIO LLC
USA & Canada

EU

1035 Cambridge Street, Cambridge, MA 02141 T: +1 (617) 945-5033 or T: +1 (800) 987-0985 F: +1 (617) 945-8218 AMSBIO Europe BV

Berenkoog 41, 1822 BH Alkmaar, Netherlands T: +31 (0) 72 8080244 F: +31 (0) 72 8080142 AMS Biotechnology (Europe) Ltd UK & Rest of the World

184 Park Drive, Milton Park Abingdon OX14 4SE T: +44 (0) 1235 828 200 F: +44 (0) 1235 820 482 AMS Biotechnology (Europe) Ltd Switzerland

Via Lisano 3, (CP.683) CH-6900 Massagno T: +41 (0) 91 604 55 22 F: +41 (0) 91 605 17 85 AMSBIO Europe BV Deutschland

T: +49 (0) 69 779099 F: +49 (0) 69 13376880

Ver 4, revised on Feb. 2022





# Instruction Manual <u>Maintenance and expansion of human ES/iPS cells with StemFit medium</u>

# 1. Materials Required

StemFit medium (e.g. Basic03, Basic04 Complete Type)

Cell dissociation reagents (e.g. Accutase™, TrypLE™ Select)

Extracellular Matrix (e.g. LDEV-free hESC qualified Geltrex™)

Human bFGF (Not required for Basic04 Complete Type)

10 mM Y-27632

PBS (-)

# 2. Media Preparation

StemFit medium is provided frozen. StemFit medium should be stored at below -20°C until use. Use sterile techniques to prepare StemFit medium.

7) Thaw frozen StemFit medium with occasional mixing at room temperature (15-25°C) or in a refrigerator (2-8°C). Avoid prolonged exposure to light.

Note: Do not thaw at 37°C, as it accelerates the degradation of the medium ingredients.

8) Aseptically mix medium components by adding the full volume of "Liquid B" to "Liquid A". Mix thoroughly. Note: Basic04 Complete Type does not require this step.

9) Add bFGF at a final concentration of 80 ng/mL. Mix thoroughly.

Note: Do not warm bFGF solution.

Note: It is recommended to adjust the concentration of bFGF accordingly to suit your cell line.

Note: Basic04 Complete Type does not require this step since it contains bFGF.

- 10) Optionally, the medium can be stored as aliquots at -20°C until the expiration date. Avoid repeated freeze-thaw cycles of the aliquots. Before use, thaw an aliquot in the refrigerator (2-8°C) overnight.
- 11) Store the thawed medium in the refrigerator.

Note: Thawed StemFit medium may be stored at 2-8°C for up to two weeks.

Note: It is recommended to store the medium in the dark.

12) Before use, warm aliquots to room temperature and use immediately.

Note: Do not warm the thawed medium to 37°C.

## 3. Passage Protocol (6-well plate)


#### Culture plate coating:

Add LDEV-free hESC-qualified Geltrex<sup>™</sup> to cold DMEM/F-12 at a 1:100 ratio and mix well immediately. Add 1 mL of the Geltrex mixture to one well of a 6-well plate. Incubate at 37°C for at least 1 hour.

Note: You can use other matrices such as Matrigel, vitronectin, laminin-521, laminin-511 or laminin-511E8.

#### Passage (Also see the technical tips: Key points for successful single-cell passage)


- 18) Prepare "passage medium", StemFit medium containing 10  $\mu$ M of the ROCK inhibitor Y-27632. For example, add 4  $\mu$ L of 10 mM Y-27632 to 4 mL of StemFit medium.
- 19) Take out the culture plate from the incubator and observe the cells under a microscope. Observe cell density, colony size, and cell morphology to confirm that the cells are suitable for passage.

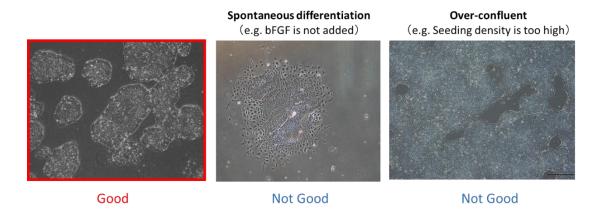

- 20) Remove the medium and wash cells with 1 mL of PBS.
- 21) Add 500 µL of cell dissociation reagents (e.g. Accutase™, TrypLE™ Select).
- 22) Incubate at 37 °C for 5-10 minutes.

Note: The dissociation condition needs to be optimized for each cell culture in your experiment.

Note: The incubation time is approximately up to 15 minutes.

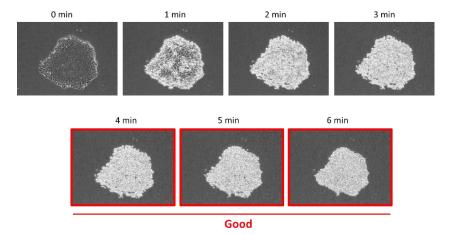

- 23) Detach cells by gentle pipetting up and down.
- 24) Transfer cells into a new polypropylene tube. Add 500  $\mu$ L of passage medium prepared in step 1) to the tube containing the cell suspension.
- 25) Centrifuge at  $300 \times g$  at room temperature for 5 minutes.
- 26) After centrifugation, aspirate the supernatant and add 1 mL of passage medium.
- 27) Gently pipette cells up and down approximately 10 times to create a single-cell suspension. Note: Pipette gently to avoid foaming.
- 28) Take a portion of the cell suspension for counting. Determine the cell concentration.
- 29) Remove coating solution from a well of prepared matrix-coated plate.
- 30) Add 1.5 mL of passage medium prepared in step 1) to the well immediately.Note: Solutions should be replaced quickly, not to allow the coated wells to dry out.
- 31) Seed 10,000-50,000 cells to a well of 6-well plate. 50,000 cells are recommended at first.

Note: Before Seeding, mix cell suspension by gently pipetting up and down.

Note: Seeding cell number should be optimized for each cell line.

32) Immediately, shake the plate to distribute cells.

Note: To avoid uneven distribution on the bottom, plate shaking should be performed immediately after seeding.

- 33) Incubate cells at 37°C, 5% CO<sub>2</sub> for more than 24 hours.
- 34) Exchange medium the next day. Remove the passage medium and gently add 1.5 mL of StemFit medium without Y-27632.

Note: Passage medium should be replaced after more than 24 hours.


35) Passage the cells every 7 days.

Note: You can culture hPSCs without weekend medium changing. See the following passage schedule examples.

Note: If the color of the medium becomes orange or yellow, it should be changed every day.

Note: Do not allow cells to become confluent.

# StemFit Passage Schedule Examples (Weekend-free feeding)

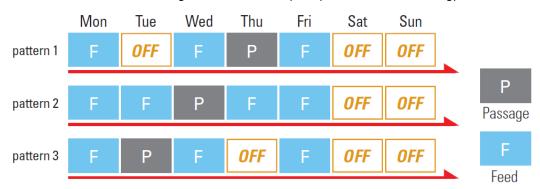


#### Reccomended volume of culture medium

	6-well	12-well	24-well	96-well
Approximate area (cm²)	9.6	4.0	2.0	0.33
Volume of medium (mL)	1.5	1	0.5	0.1

## 4. Transfer from other culture systems

- To transfer cells from other culture systems to the StemFit system, it is recommended to passage with the original culture system, then to switch the culture medium to StemFit supplemented with bFGF 2-3 days prior to the next passage.
- Seeding the cells at a higher density (>1.0 x 10<sup>5</sup> cells per well (6-well plate)) may be helpful for the first few passages.

Transition Schedule Example

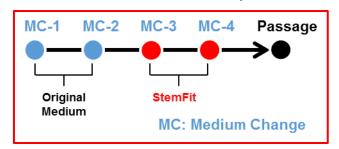

#### 5. Reference

Morizane, R. & Bonventre, J. V. Generation of nephron progenitor cells and kidney organoids from human pluripotent stem cells. *Nat Protoc.* 2017 Jan;12(1):195-207.

## 6. FAQs & Troubleshooting

#### 5) What are the benefits of single cell culture? / Why is single cell culture recommended?

- ➤ High fold expansion rate (~100× expansion / weekly passage).
- Reproducible and manageable culture by controlling the numbers of seeded cells.
- Cost-effective culture with lower medium volume and less frequent medium changes.
- Produce an iPSC colony derived from single cells (essential for genome editing).

#### 6) Can I use StemFit for clump culture?

Yes, but it is recommended to make a small clump and seeding at a low cell density.

#### 7) Which bFGF can be used?

Any commercially available bFGF have been confirmed to work. Ajinomoto provides high quality, animalorigin free bFGF (Item code: SP-FGF2-G-001MG).

## 8) Cells do not grow well.

- Adjust the bFGF concentration (e.g. 40 80 ng/mL) according to your cell line.
- Try a higher seeding density (e.g. > 1.0 x 10<sup>5</sup> cells per a well of 6-well plate).
- > Distribute the cells evenly upon passage.
- Culture in Y-27632-containing medium for more than 24 hours after passaging.
- > Make sure that the medium was thawed within 2 weeks and has not been heated to 37°C.
- Detached cells with low viability may not grow well.

#### 7. Contact information

Manufacturer: AJINOMOTO CO., INC.

# Suppliers (Global Source): AMSBIO / AMS Biotechnology (Europe) Ltd

Email: <u>info@amsbio.com</u>

AMSBIO | www.amsbio.com | info@amsbio.com

AMSBIO LLC USA & Canada



1035 Cambridge Street, Cambridge, MA 02141 T: +1 (617) 945-5033 or T: +1 (800) 987-0985 F: +1 (617) 945-8218 AMSBIO Europe BV

Berenkoog 41, 1822 BH Alkmaar, Netherlands T: +31 (0) 72 8080244 F: +31 (0) 72 8080142 AMS Biotechnology (Europe) Ltd UK & Rest of the World

184 Park Drive, Milton Park Abingdon OX14 4SE T: +44 (0) 1235 828 200 F: +44 (0) 1235 820 482 AMS Biotechnology (Europe) Ltd Switzerland

Via Lisano 3, (CP.683) CH-6900 Massagno T: +41 (0) 91 604 55 22 F: +41 (0) 91 605 17 85 AMSBIO Europe BV Deutschland

T: +49 (0) 69 779099 F: +49 (0) 69 13376880

Ver 5, revised on Feb. 2022