



SZABO SCANDIC

Part of Europa Biosite

Produktinformation



Forschungsprodukte & Biochemikalien



Zellkultur & Verbrauchsmaterial



Diagnostik & molekulare Diagnostik



Laborgeräte & Service

Weitere Information auf den folgenden Seiten!
See the following pages for more information!



Lieferung & Zahlungsart

siehe unsere [Liefer- und Versandbedingungen](#)

Zuschläge

- Mindermengenzuschlag
- Trockeneiszuschlag
- Gefahrgutzuschlag
- Expressversand

SZABO-SCANDIC HandelsgmbH

Quellenstraße 110, A-1100 Wien

T. +43(0)1 489 3961-0

F. +43(0)1 489 3961-7

mail@szabo-scandic.com

www.szabo-scandic.com

[linkedin.com/company/szaboscandic](https://www.linkedin.com/company/szaboscandic) 

PHEA (Phenethylamine A) Lateral Flow Assay kit

Catalog No: E-FS-C011

20T/50T/80T

This manual must be read attentively and completely before using this product.

If you have any problems, please contact our Technical Service Center for help.

Toll-free: 1-888-852-8623 Tel: 1-832-243-6086 Fax: 1-832-243-6017

Email: techsupport@elabscience.com

Website: www.elabscience.com

Please kindly provide us the lot number (on the outside of the box) of the kit for more efficient service.

Test principle

This kit uses the principle of Immunochromatography assay for the qualitative detection. It can detect Phenethylamine A (PHEA) in urine sample. After adding the sample solution into the sample well of detection card, PHEA of the sample solution combine with the gold-labelled antibody, so as to prevent the combining of gold-labelled antibody with PHEA conjugate on the cellulose membrane. When the concentration of PHEA in the sample solution is more than the detection limit, the detect line do not show color and the result is positive. When the concentration of PHEA in the sample solution is less than the detection limit, the detect line show color and the result is negative.

Technical indicator

Sensitivity: 3 ppb (ng/mL)

Detection limit: Urine---3 ppb

Kits components

| Item | Specifications |
|--|----------------|
| Detection card (with disposable dropper) | 50 T/kit |
| Manual | 1 copy |

Other materials required but not supplied

Instruments: Centrifuge

High-precision transferpettor: Single channel (20-200 μ L).

Notes

1. FOR RESEARCH USE ONLY. Do not use product out of date or in a broken aluminum foil.
2. The detection card should be adjusted to room temperature after removed from the refrigerator before opening. The opening detection card should be used as soon as possible so as not to be invalid because of moisture.
3. Avoid of contacting the white membrane at the middle of the sample well.
4. The disposable dropper cannot be mixing to avoid the cross-contaminant.
5. The tested sample should be clear, no turbidity particle and no bacterial pollution, otherwise it is easy to result in abnormal phenomena such as obstruction, unobvious color, etc., which affect the judgment of the experiment result.
6. If the samples are not indicated in the manual, a preliminary experiment to determine the validity of the kit is necessary.
7. The kit is used for rapid screening of actual samples. If the test result is positive, the instrument method such as HPLC, LC/MS, etc. can be used for quantitative confirmation.
8. Each reagent is optimized for use in the E-FS-C011. Do not substitute reagents from any other manufacturer into the test kit. Do not combine reagents from other E-FS-C011 with different lot numbers.

Storage and expiry date

Storage: Store at 2-30°C. With cool and dry environment.

Expiry date: expiration date is on the packing box.

Sample pretreatment

Restore all reagents and samples to room temperature before use.

1. Sample pretreatment Notice:

Experimental apparatus should be clean, and the disposable dropper should be disposable to avoid the experiment result be interfered by the contamination.

2. Sample pretreatment procedure:

Take clear urine (swine) sample of to detect, the sample needs to be centrifuged at 4000 r/min for 10 min if turbid.


Note: Detection limit: 3 ppb

Experiment procedure


1. Tear the aluminum foil bag of the detection card and take out the detection card, and put it on a smooth, clean table.
2. Take the prepared clear sample supernatant with the matching disposable dropper, add 2-3 drops (about 60 μL) of sample to the sample well (S) vertically and slowly (Avoid foaming).
3. Incubate for 8 to 10 minutes and then judge the results immediately.

Judgment of result


1. **Negative:** The control line region (C) and the test line region (T) both show a line. It indicates the content of PHEA in the sample is lower than detection limit or the sample doesn't contain PHEA.
2. **Positive:** Only the control line region (C) show a line. It indicates the content of PHEA in the sample is higher than detection limit
3. **Invalid:** The control line region (C) does not show a line. It indicates operation process is wrong or the test card is invalid.



Negative



Positive

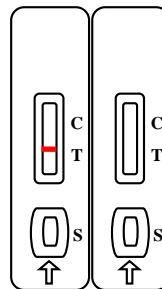

Invalid